 




# Emerson EM744 Back Plate

This guide will allow you to break down the device to be able to get the to parts inside of the Emerson EM744

Written By: Easton Olsen

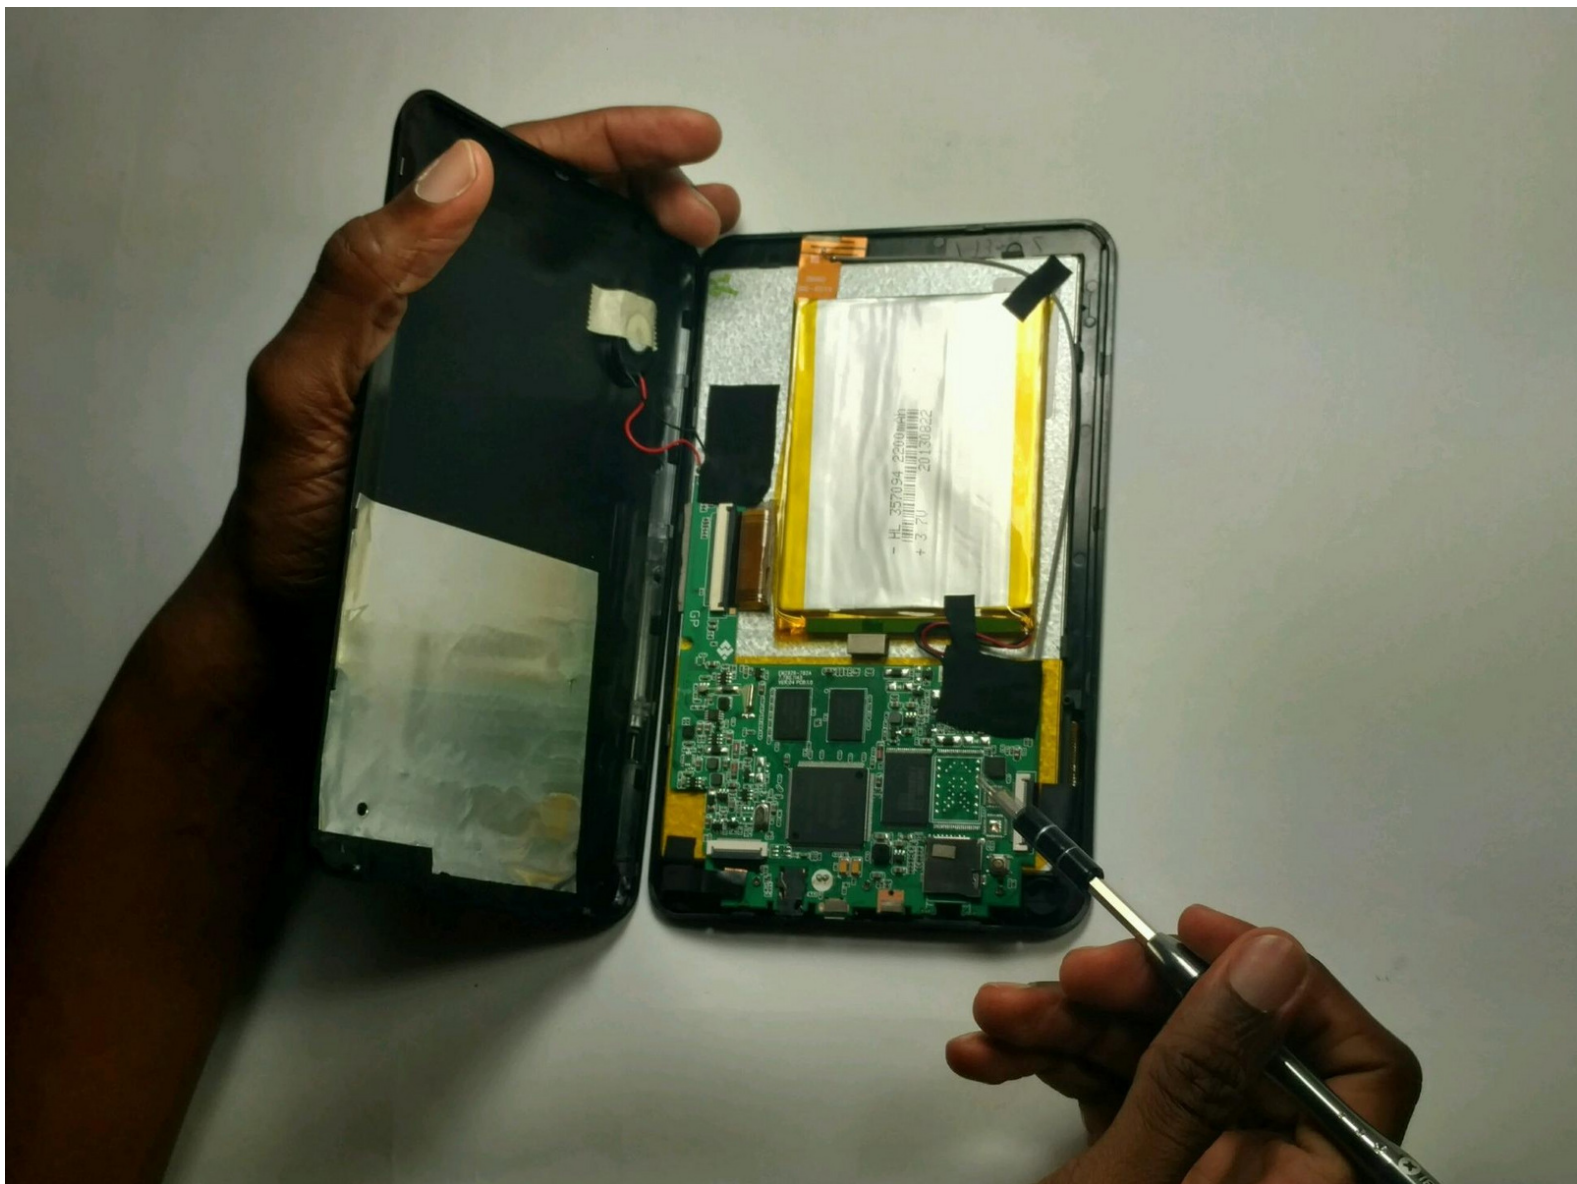

## INTRODUCTION

In order to open your device to gain access to the parts inside your device you will need to follow this steps closely . You will need certain tools such as a Phillips Head screwdriver, #00 3mm screws, spudger, plastic opening tool, as well as careful movements so you don't break any other components.



### TOOLS:

 
- [Spudger](#) (1)
  - [Phillips #00 Screwdriver](#) (1)
-

## Step 1 — Back Plate



- Use a Phillips 00 bit to remove two 3mm screws from the bottom of the tablet.

## Step 2

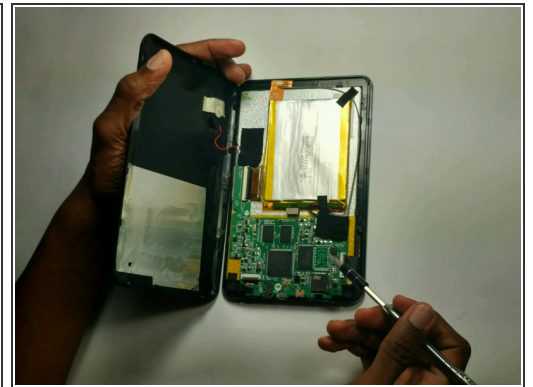

- Insert the nylon spudger into the bottom of the tablet, and gently slide it up the side.
- Pull apart the two sides of the tablet, exposing the circuit board, battery, and other components of the tablet.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-26 03:12:43 AM.